


INSTRUCTIONS

MX-600X
DIRT BIKE / SCOOTER CARRIER

PARTS LIST:

- A. 1 3/4" Bolts
- B. 3/4" Bolts
- C. 2 3/8" Bolts
- D. Wing Nuts
- E. Small Nuts
- F. Big Nuts
- G. Eye Loops
- H. Spring Clips
- I. Long Pins
- J. 3 1/2" Pinch Bolt
- K. Ramp
- L. Carrier Track
- M. Ramp Holder Bracket
- N. Main Hitch Tube
- O. Carrier Support Bracket
- P. Anti-Tilt Bracket

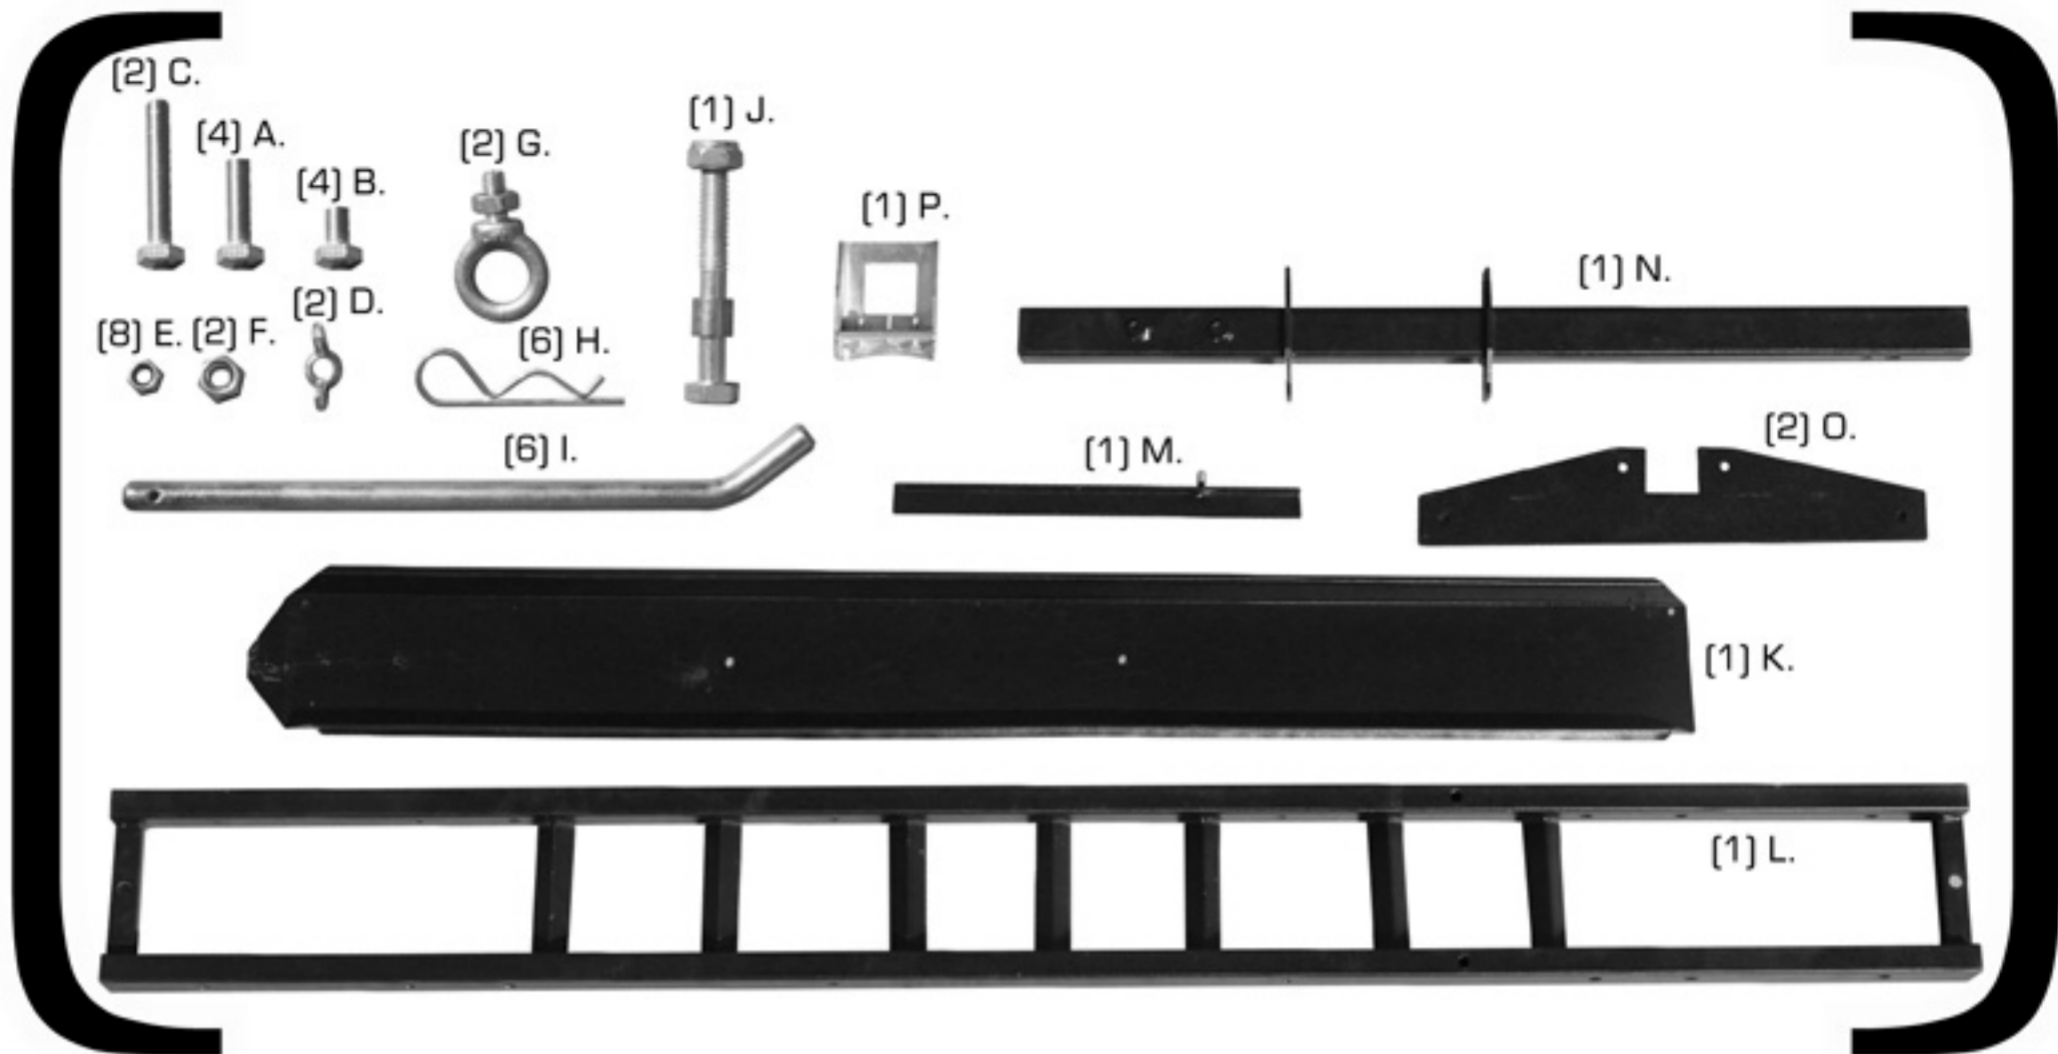

[Step 1.] Start by placing the Main Hitch Tube on cardboard to protect the paint & secure the Carrier Support Brackets to the Hitch Tube with [4] 3/4" Bolts and Small Nuts keeping them loose.




[Step 2.] Slide the Carrier Track between the Carrier Support Brackets and secure it using [4] 1 3/4" Bolts and Small Nuts. Tighten all bolts until secure. DO NOT OVER-TIGHTEN



[Step 3.] Secure the Ramp Holder Bracket to the Carrier Track with [2] 2 3/8" Bolts and Big Nuts keeping them loose.



[Step 4.] Place the Ramp onto the Main Hitch Tube & Ramp Holder Bracket and secure it using [2] Wing Nuts. Tighten the Two bolts on the Ramp Holder Bracket.

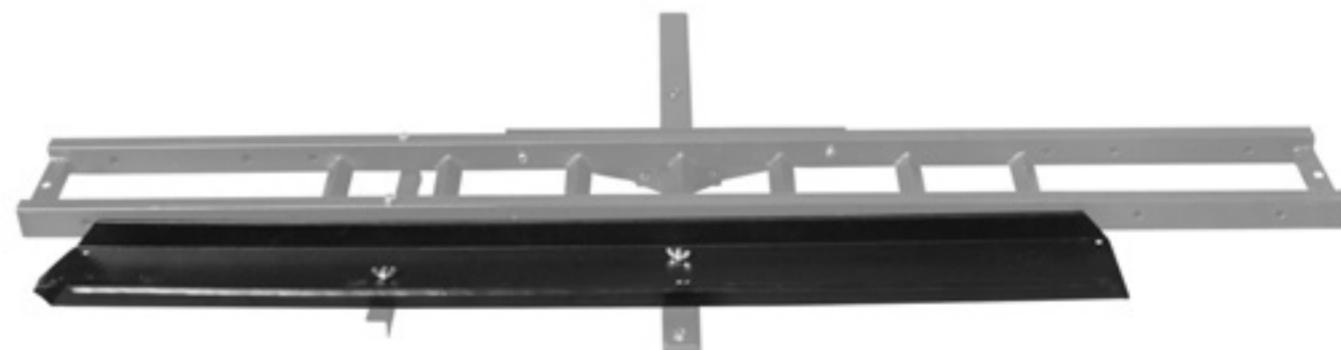

[Step 5.] Next, slide the Long Pins into the sides of the Carrier Track and secure them with Spring Clips. Install the [2] Eye Loops into the Main Hitch Tube.



[Step 6.] Slide the Anti-Tilt Bracket over the Main Hitch Tube & place the carrier into your hitch receiver. Line up the holes and insert the Pinch Bolt into the 2nd hole. Be sure the cylinder-like sleeve creates pressure against the receiver for a wobble-free fitment. Tighten the three bolts on the Anti-Tilt Bracket.

